



DESIGNER

**EXTERIOR**

**TIMBERSHADES**

ALKYD SEMI-TRANSPARENT STAIN

SINCE 1956  
**hallman  
lindsay**  
QUALITY PAINTS®

**GREAT PAINT GREAT PEOPLE**

hallmanlindsay.com



# TIMBERSHADES

TIMBERSHADES NATURAL WOOD TONER is our finest alkyd deck and siding stain formulated to enhance and highlight the natural beauty of wood surfaces. Designed specifically for Wisconsin's harsh weather extremes, TIMBERSHADES NATURAL WOOD TONER provides a rich, water repellent finish that can withstand seasonal exposure and foot traffic. Simplified single-coat application allows for easy maintenance and woodcare for years to come. TIMBERSHADES NATURAL WOOD TONER is formulated for exterior use on new unfinished wood decks and siding.

## FEATURES

- Oil-Based Hydrophobic Technology
- Rich and Natural Pre-Mixed Colors
- Single Coat Application
- Enhanced Natural Appearance

## BENEFITS

### Rich and Natural Colors



Pre-mixed cedartone colors use trans-oxide pigments to provide rich, natural wood tones.

### Water Repellent Finish

Special hydrophobic technology repels water to help extend the life of exterior surfaces.

### Easy Application

Easy single-coat application provides an enhanced natural appearance that will never peel or flake off when applied properly.

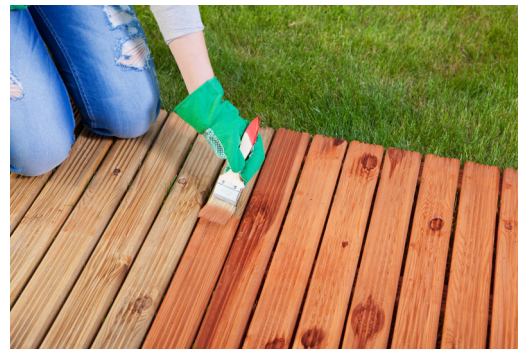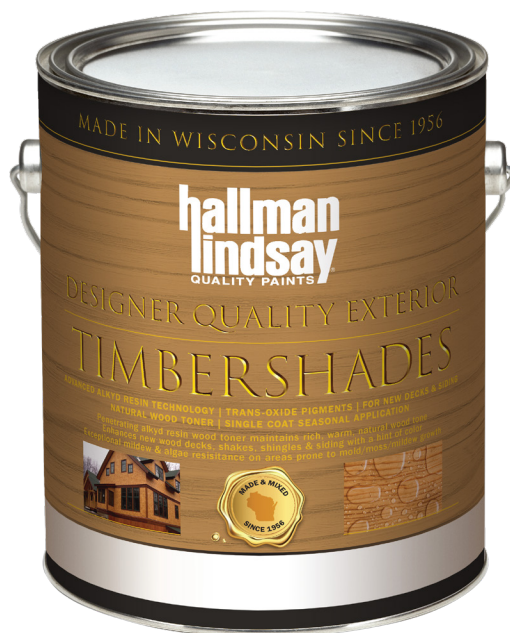

## TECHNICAL INFORMATION

### APPLICATION INFORMATION

Drying Time at 77° F 50% R.H:

To Touch: 24 hours\*

\* Cooler temperatures and higher relative humidity will extend dry times

Application Temperature:

Apply Down to 50° F. Ask for details.

Recommended Spreading Rate:

300-400 sq.ft./gal

Solids Content:

Volume: 35% ± 2 Weight: 39% ± 2

BASES: CEDARTONE GOLD - 197-49 • NATURAL CEDARTONE - 197-51 • CEDARTONE BROWN - 197-53 • PICKLE WHITE - 197-56

### EQUIPMENT RECOMMENDATIONS

Roller: Lambswool 3/8" - 3/4" nap

Brush: Natural china bristle or synthetic blend

Airless: Minimum 1/2 GPM, .015" tip @ 1000 PSI

HVLP: Not recommended

### SAFETY AND COMPLIANCE

VOC (EPA Method 24):

522 g/L 4.36 lbs./Gal

### FINISHING RECOMMENDATIONS

STAIN MUST BE ABLE TO PENETRATE THE WOOD FOR PROPER PERFORMANCE. DO NOT OVER APPLY OR ALLOW STAIN TO PUDDLE ON SURFACE.

New Wood Surfaces: Cedar, Redwood, Pine, Treated Pine: Apply TIMBERSHADES 197 to achieve desired appearance.

Recoating Wood Surfaces:

Surface must be free of dirt, grime, previous stains, or other contaminants that prevent stain penetration. Apply TIMBERSHADES 197 to achieve desired appearance.